


ABRASION TESTER

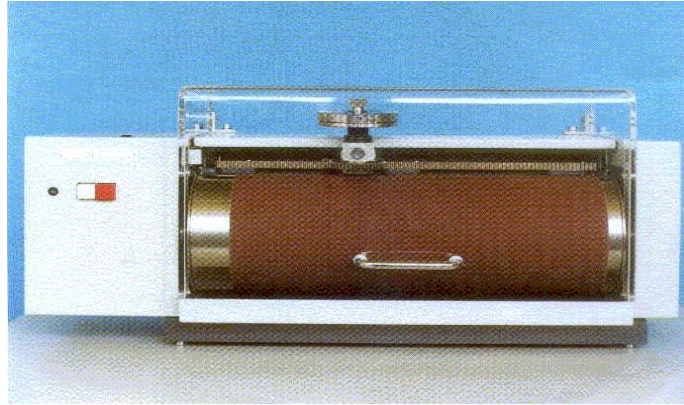

The Abrasion Tester is used to evaluate the resistance of elastomers to frictional wearing. Abrasion tests to this testing standard are performed on samples of materials which undergo wear and abrasion during their normal working life (e.g. tyres, conveyor and drive belts, shoe soles).

The machine is as per DIN-53516.

FINE MARKETING

15-A, BHARAT INDUSTRIAL ESTATE, LAKE ROAD, BHANDUP (WEST), MUMBAI – 400 078
TEL (022) 6799 5481 , 6508 2530, 2596 5796 FAX: (022) 2596 4859
Email : siyer@bom5.vsnl.net.in Web: www.finemarketingindia.com